



Installation instructions Air release valve model DAV-MP-1A

1. The valve must be installed vertically.
2. The outlet from the main pipe should be located at the top of the pipe, and an isolating valve (a Gate valve or a Ball valve) assembled on the outlet riser.
3. In case of underground configuration, it is essential to allow air outlet as drawn below.

A net strainer is recommended to be assembled on this outlet.

If the valve pit may be flooded, it is recommended to assemble a check valve

Above-ground
Valve configuration

Underground
Valve configuration