


Installation instructions Air/ Vacuum Valve model DAV-M-x-K [A] [SA]

(x= valve size in inches)

1. The valve should be installed in vertical position only
2. The outlet from the main pipe should be at the the top of the pipe, and an isolating valve (Gate valve or a flanged- type butterfly valve) assembled on the outlet riser. Riser diameter should not be smaller than the valve nominal diameter.
3. It is highly- recommended (although not compulsory) to locate the air valve itself beside the main, as described in the drawing below.
4. In case of underground configuration, it is essential to allow air outlet as drawn below.

The diameter of this outlet must be equal or larger than the valve diameter.

A net strainer is recommended to be assembled on this outlet.

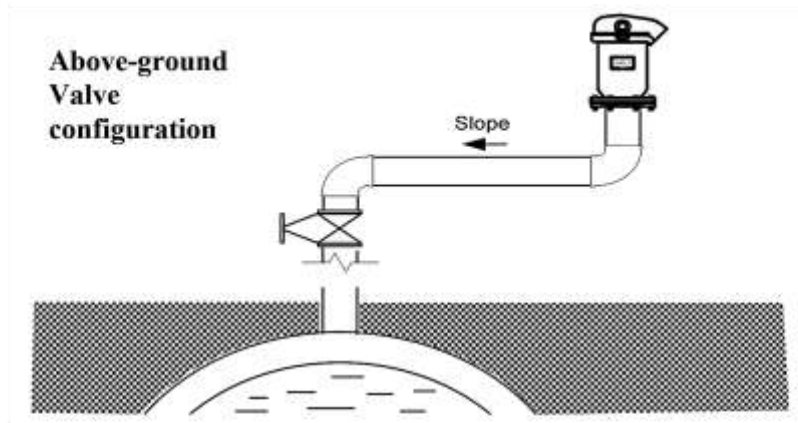

**Underground
Valve
configuration**

